

Technobooth - User Guide



INTRODUCTION

Technobooshs are ideal for working on group assignments or planning presentations. They are equipped with a large touchscreen, an HDMI/USB-C lead, wireless presentation and a power point.

This guide aims to provide a quick overview of how to use the Technobooshs at BU:




STEP ONE:

Press the **POWER** button in the bottom right corner to get started.

After a few moments, the **Home** screen will be displayed.


STEP TWO:

From the **Home** screen, press **Connect**, then select which input you'd like to use.

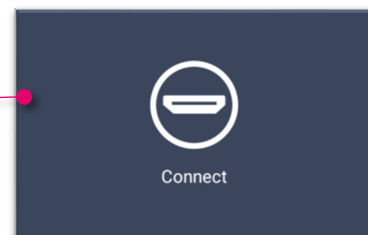

HOME

To return to the **Home** screen at any time, press the floating **PENCIL** icon:

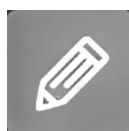

Then press the **HOME** icon. This will allow you to change inputs etc.



INPUTS

Home

Return to the Home screen

HDMI Lead

Connect a laptop via USB-C or HDMI

WePresent

Present wirelessly over the **BU WiFi**

